


HazCam™

Quick User's Guide




Pragmatic Communications Systems, Inc.
www.Pragmatic1.com

Camera:

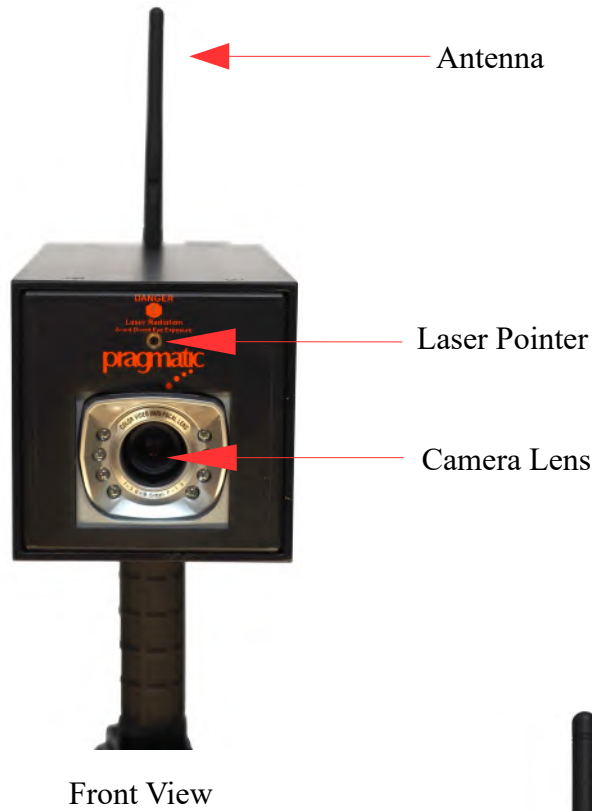


Receiver System (Case Lid):

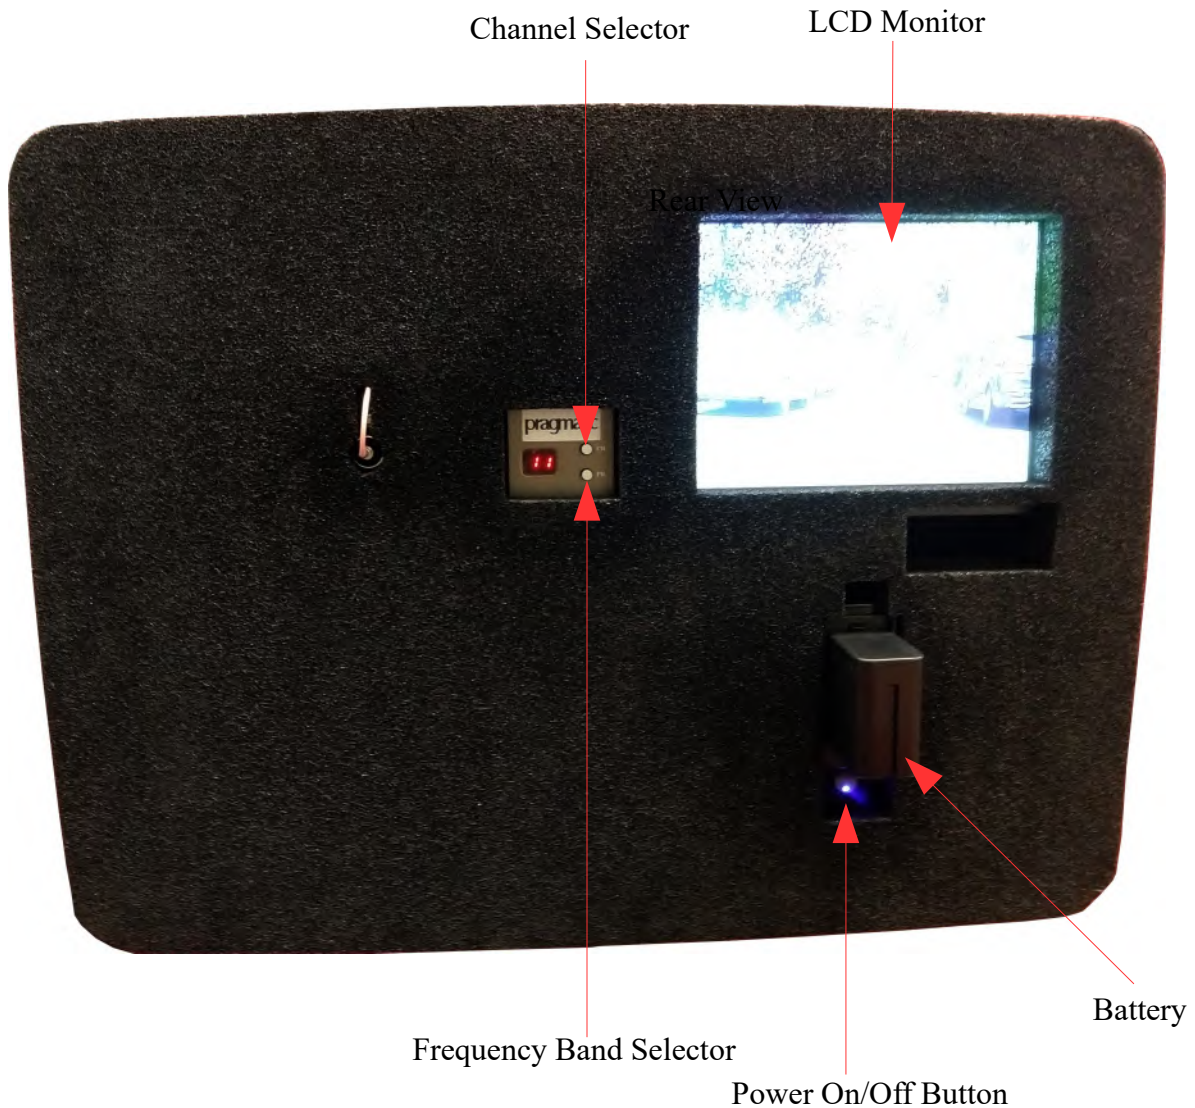

Operation:

1. Insert a fully charged battery into the receiver.
2. Turn the power button to ON position. The Blue LED light will light up. The receiver LED will display the Frequency Band and Channel number in Red ED digits. The LCD monitor will briefly display a blank screen with [A/V] in the OSD message. Now the receiver is ready.
3. Insert a fully charged battery into the Camera.
4. Push the power button to ON position on the camera. The Blue LED light ring will light up around the power button.
5. The camera transmitter Frequency Band and Channel number will be displayed in Red LED.
6. The LCD monitor in the receiver will display the video from the camera. The receiver and camera must be on the same Frequency Band and Channel number. There are 5 frequency bands with 8 available channels for a total of 40 available connections for interference free transmission.
7. After using the system, turn off the camera and receiver power and place the batteries in the charger. Fully depleted batteries may take up to 8 hours or more to fully charge. Two spare batteries are provided for longer system operations.

HazCam Battery Charger System (Case Bottom):

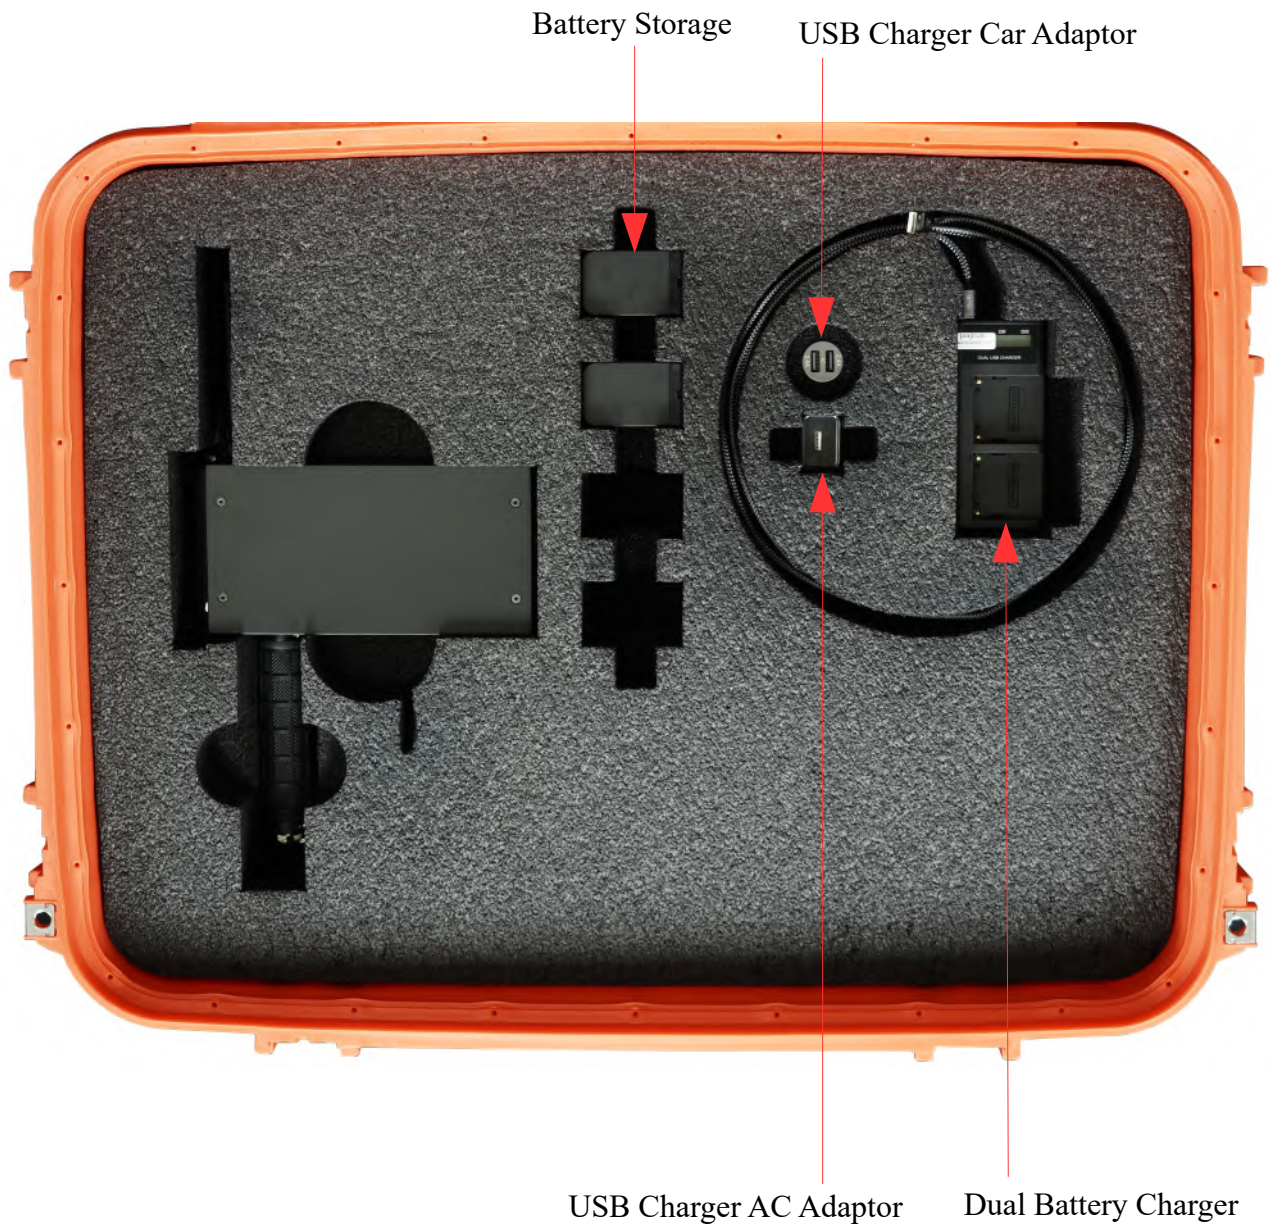

Authorized Distributor

JAECO Fire & Safety
Santa Clara, CA
www.jaecosafe.com